 
 
 
 
 
 
 



kitko.

KITCHEN SOLUTIONS

600mm PANTRY CABINET




STEP 1

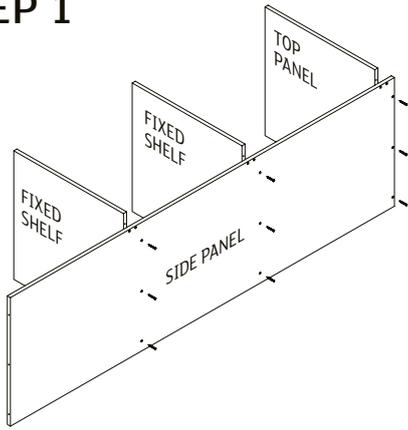


Screw the fixed shelves and top panel into side panel.

STEP 2

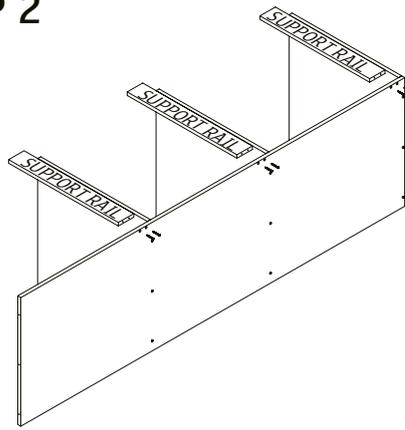


Screw support rails in position.

STEP 3

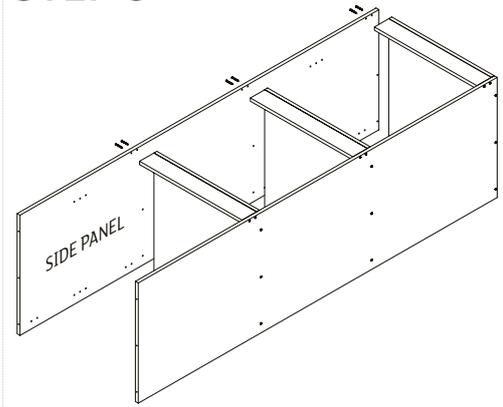


Attach remaining side panel.

STEP 4

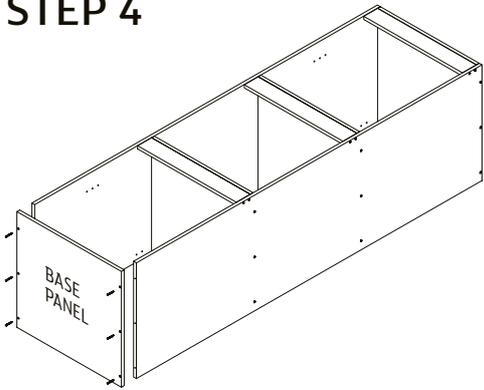


Attach base panel.

STEP 5

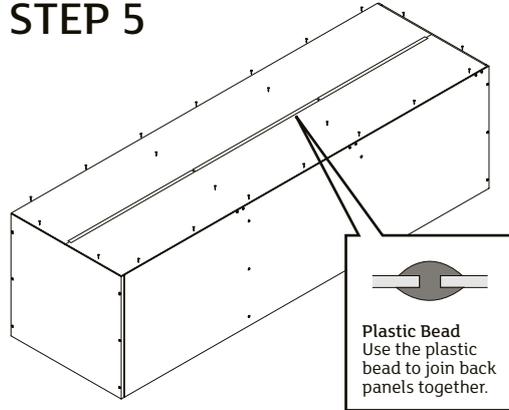


Nail back panels onto the top panel, base panel, fixed shelves and support rails.

STEP 6

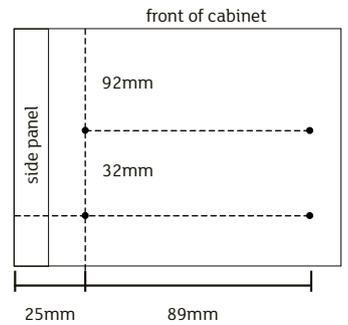


Turn the cabinet over. Mark out the dimensions shown.

STEP 7

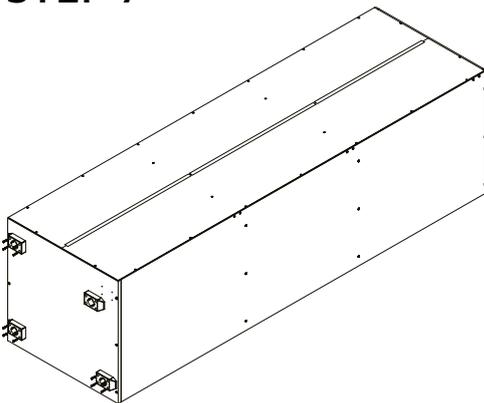


Screw the base plates for the adjustable legs in position.

STEP 8

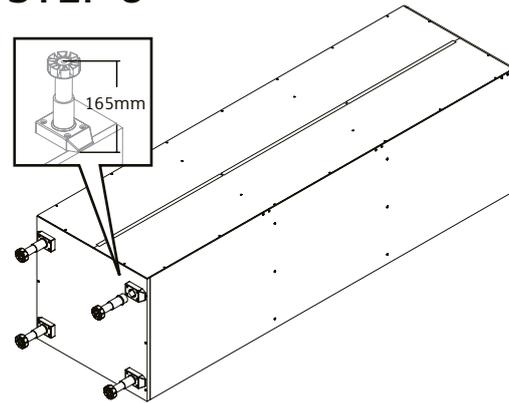

Attach the legs to the base plates. Set the height of the adjustable legs to 165mm.

STEP 9

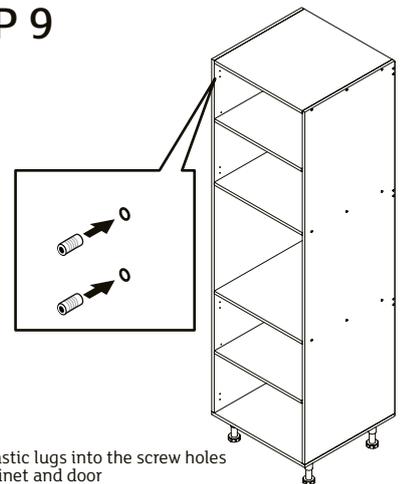

Tap the plastic lugs into the screw holes on the cabinet and door

 
 
 
 
Caution: Please ensure all cabinets are screwed into your timber stud wall. If attaching to concrete, brick, steel or other sub surfaces seek advice from your hardware specialist. WARNING: Do not allow children to climb on this furniture – it may topple over and badly injure a child.

Do not place toys or other child appealing items on top of this furniture. For advice or any other questions you may have, call customer service on: AU Customers: 1800 666 078 between 8:00am - 6:00pm E.S.T Monday to Friday NZ Customers: 0800 522 663 between 8:00am - 6:00pm E.S.T Monday to Friday


kitko.

KITCHEN SOLUTIONS


600mm PANTRY CABINET



STEP 10

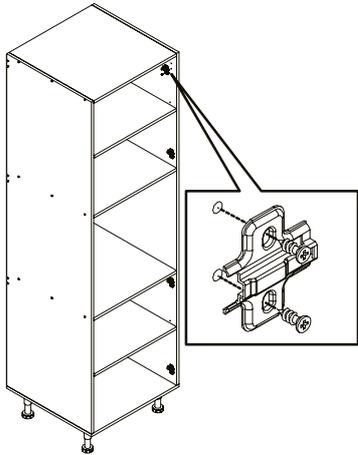


STEP 11

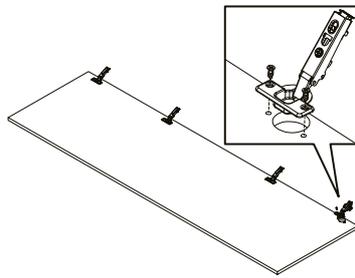

Attach hinges to the door.


STEP 12

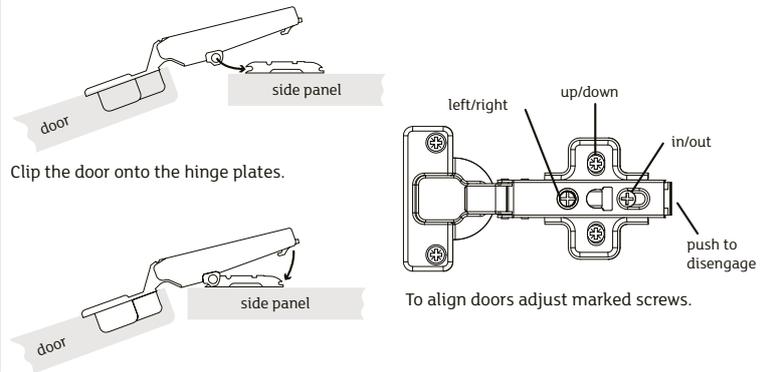

Clip the door onto the hinge plates.


Now push down to clip hinge securely together.

STEP 13

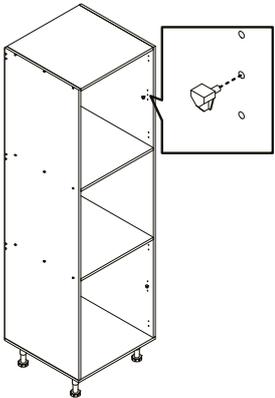

Place shelf supports in the shelf support holes.


STEP 14

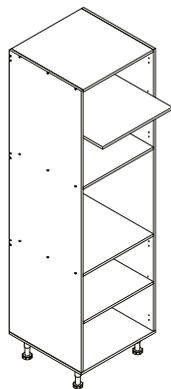


Rest the adjustable shelves on the shelf supports.

STEP 15

Place masking tape on both sides of the door where holes will be drilled to avoid chipping. Pre drill using 4.5mm drill bit. Attach the handle.

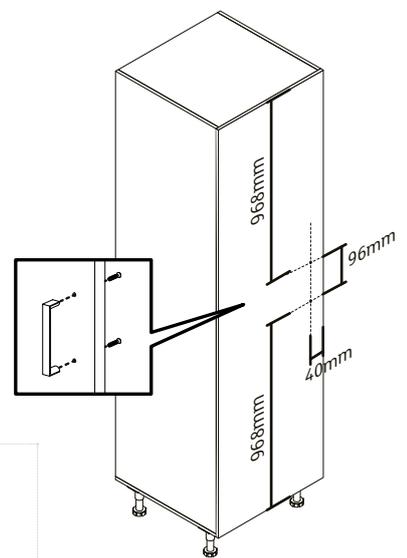


STEP 16

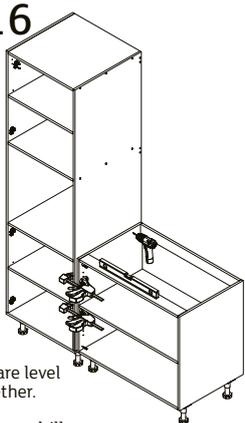

Check cabinets are level then clamp together.

Pre-drill using 2mm drill bit and attach cabinets together.

STEP 17

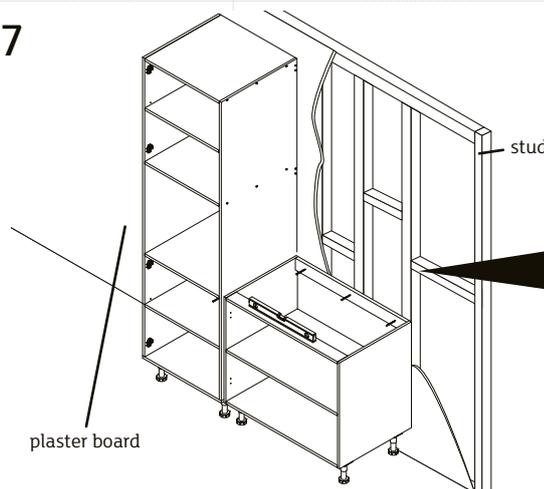

plaster board

Caution:

Please ensure all cabinets are screwed into your timber stud wall using a minimum of 60mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.

Caution: Please ensure all cabinets are screwed into your timber stud wall. If attaching to concrete, brick, steel or other sub surfaces seek advice from your hardware specialist. **WARNING:** Do not allow children to climb on this furniture – it may topple over and badly injure a child.

Do not place toys or other child appealing items on top of this furniture. For advice or any other questions you may have, call customer service on: AU Customers: 1800 666 078 between 8:00am - 6:00pm E.S.T Monday to Friday NZ Customers: 0800 522 663 between 8:00am - 6:00pm E.S.T Monday to Friday